

somfy®


TaHoma® switch

Installation guide



EN

Welcome !




Start TaHoma[®] switch
in a few steps

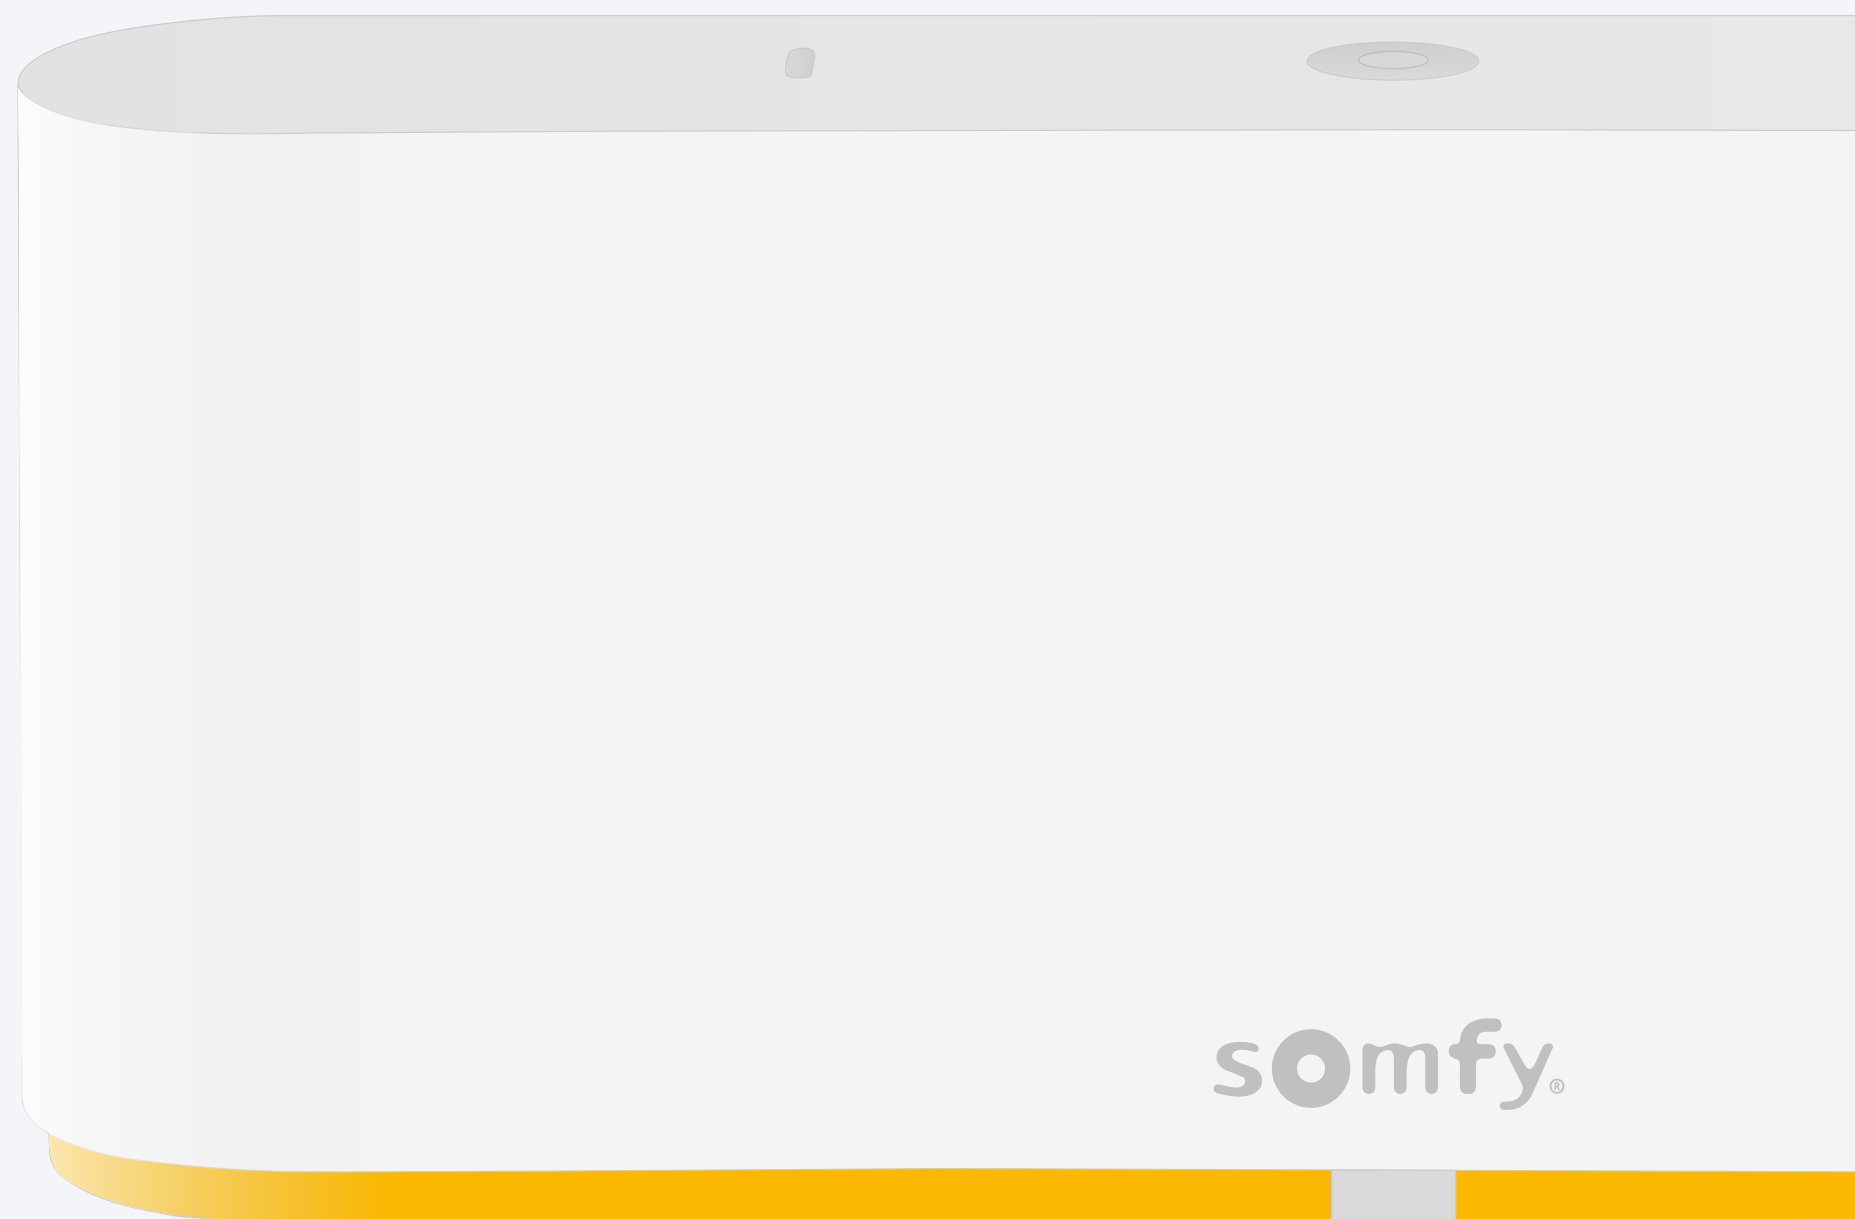

Pack content

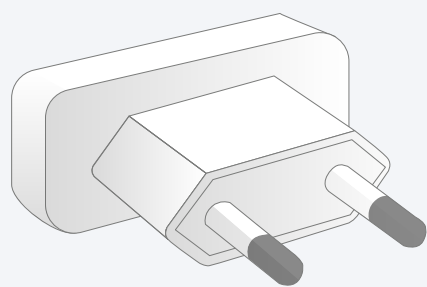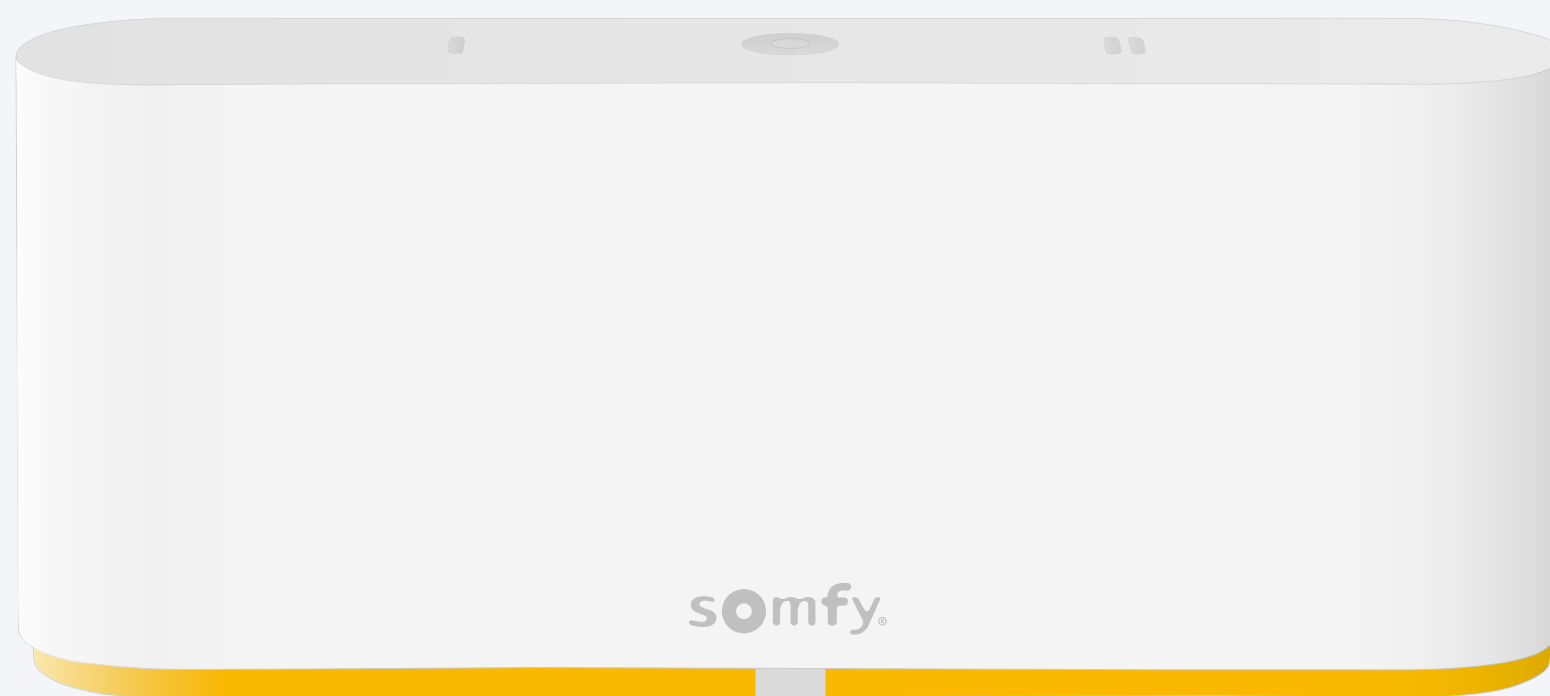

or

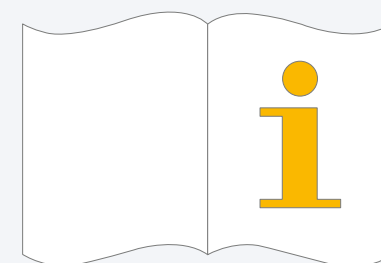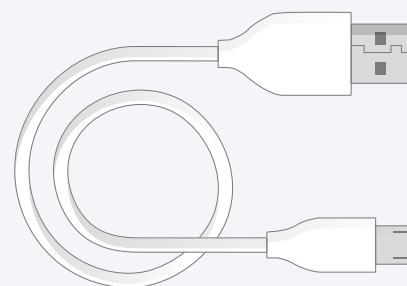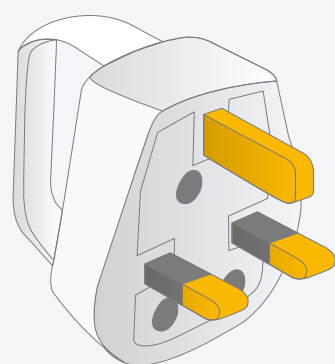

Install TaHoma[®] app




Follow instructions

TaHoma[®] installed


1. Launch TaHoma[®] app

Start

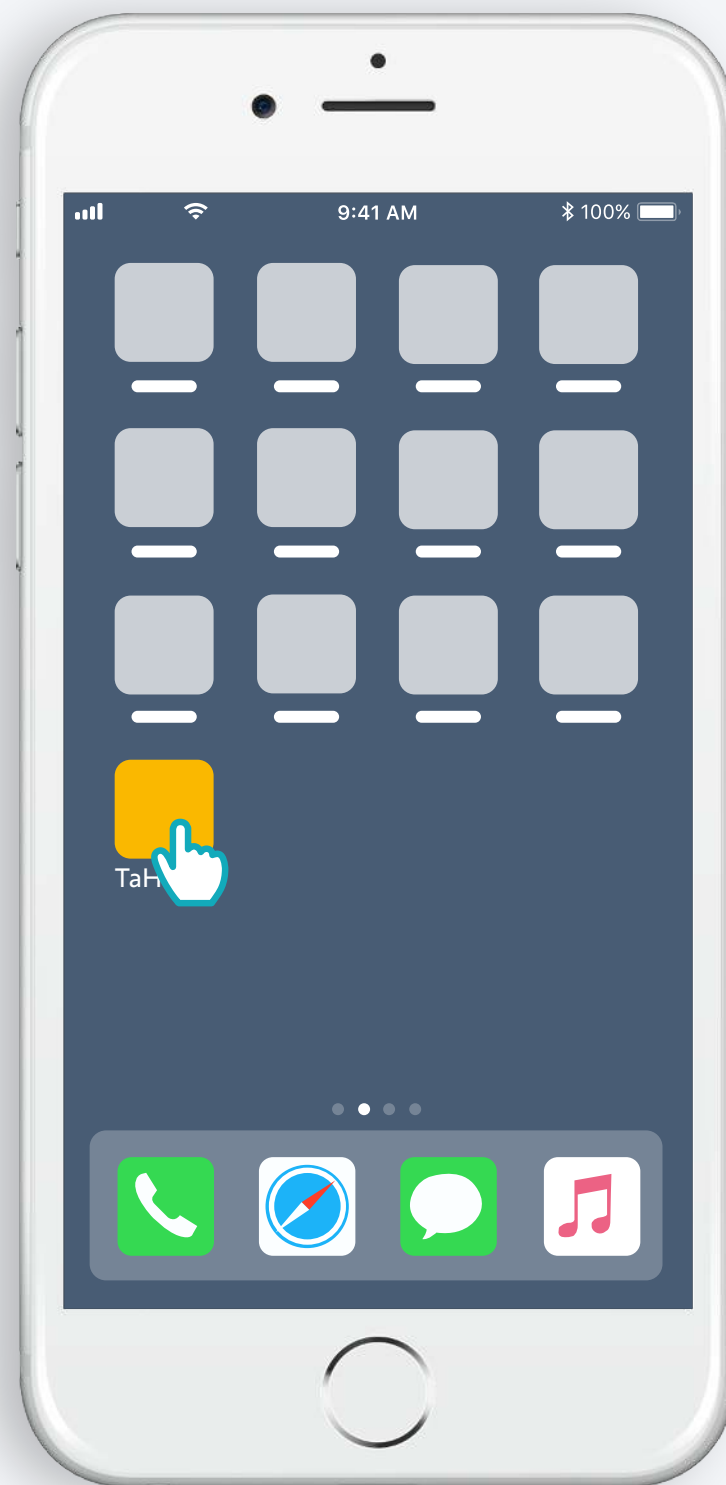


Open TaHoma[®] app

Start

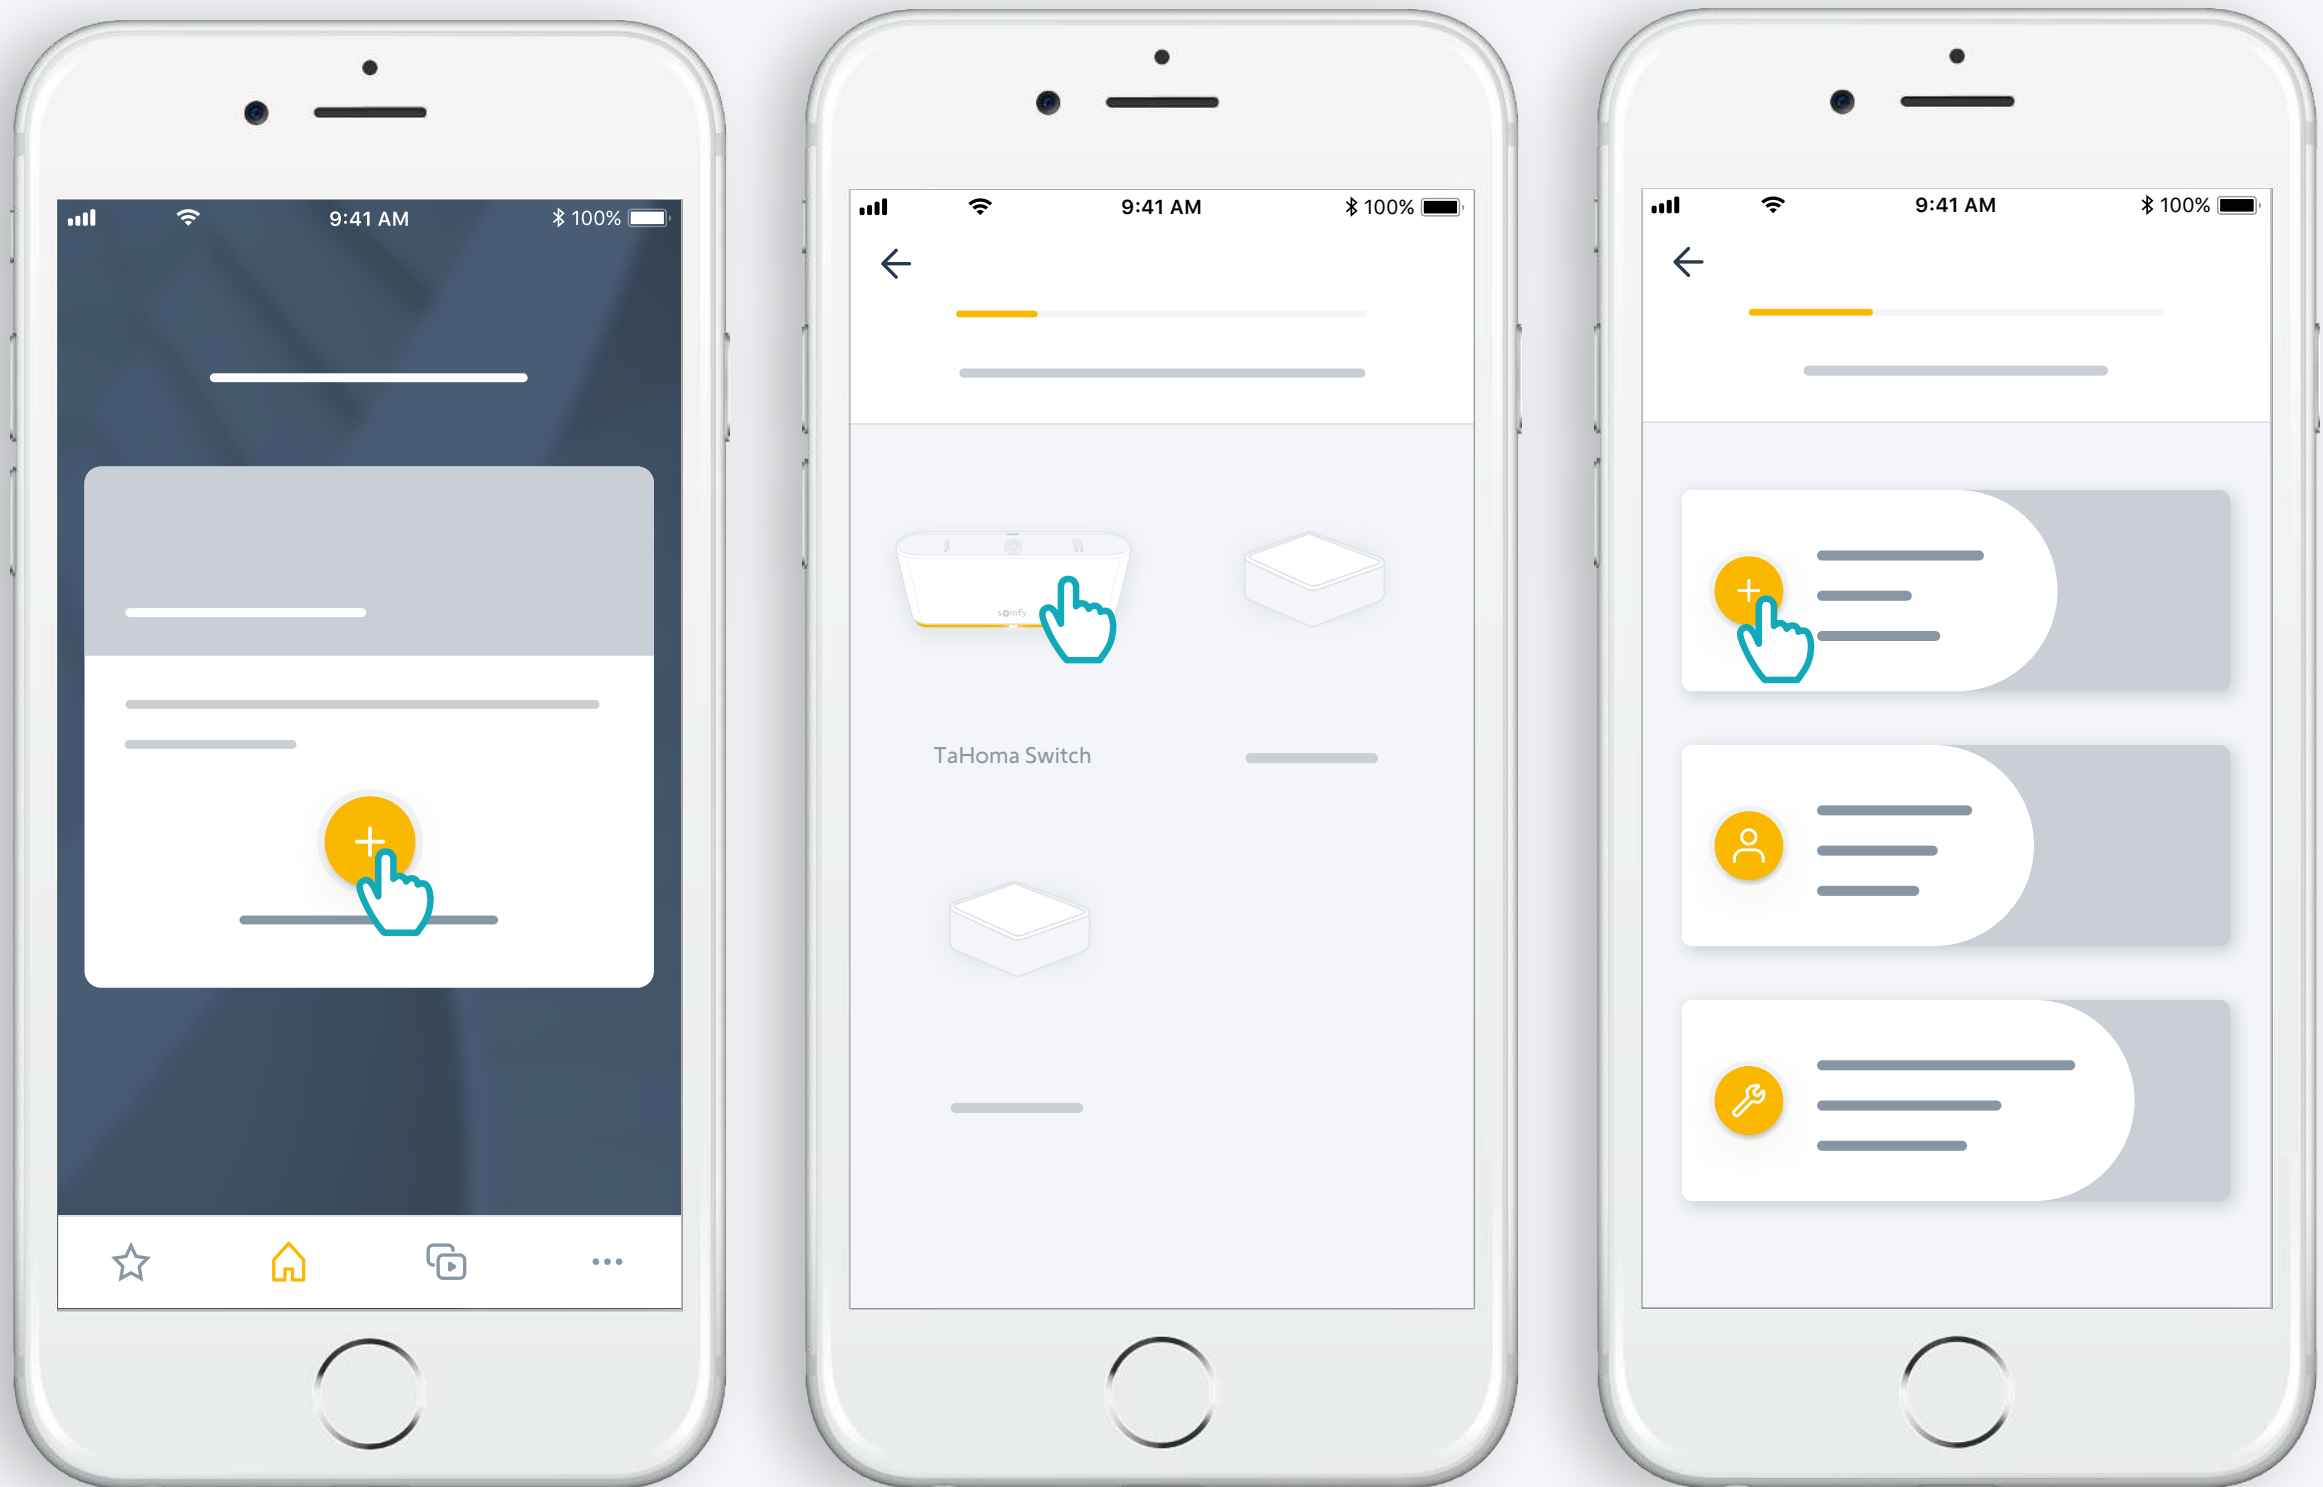


Start TaHoma[®] switch installation

Plug power supply

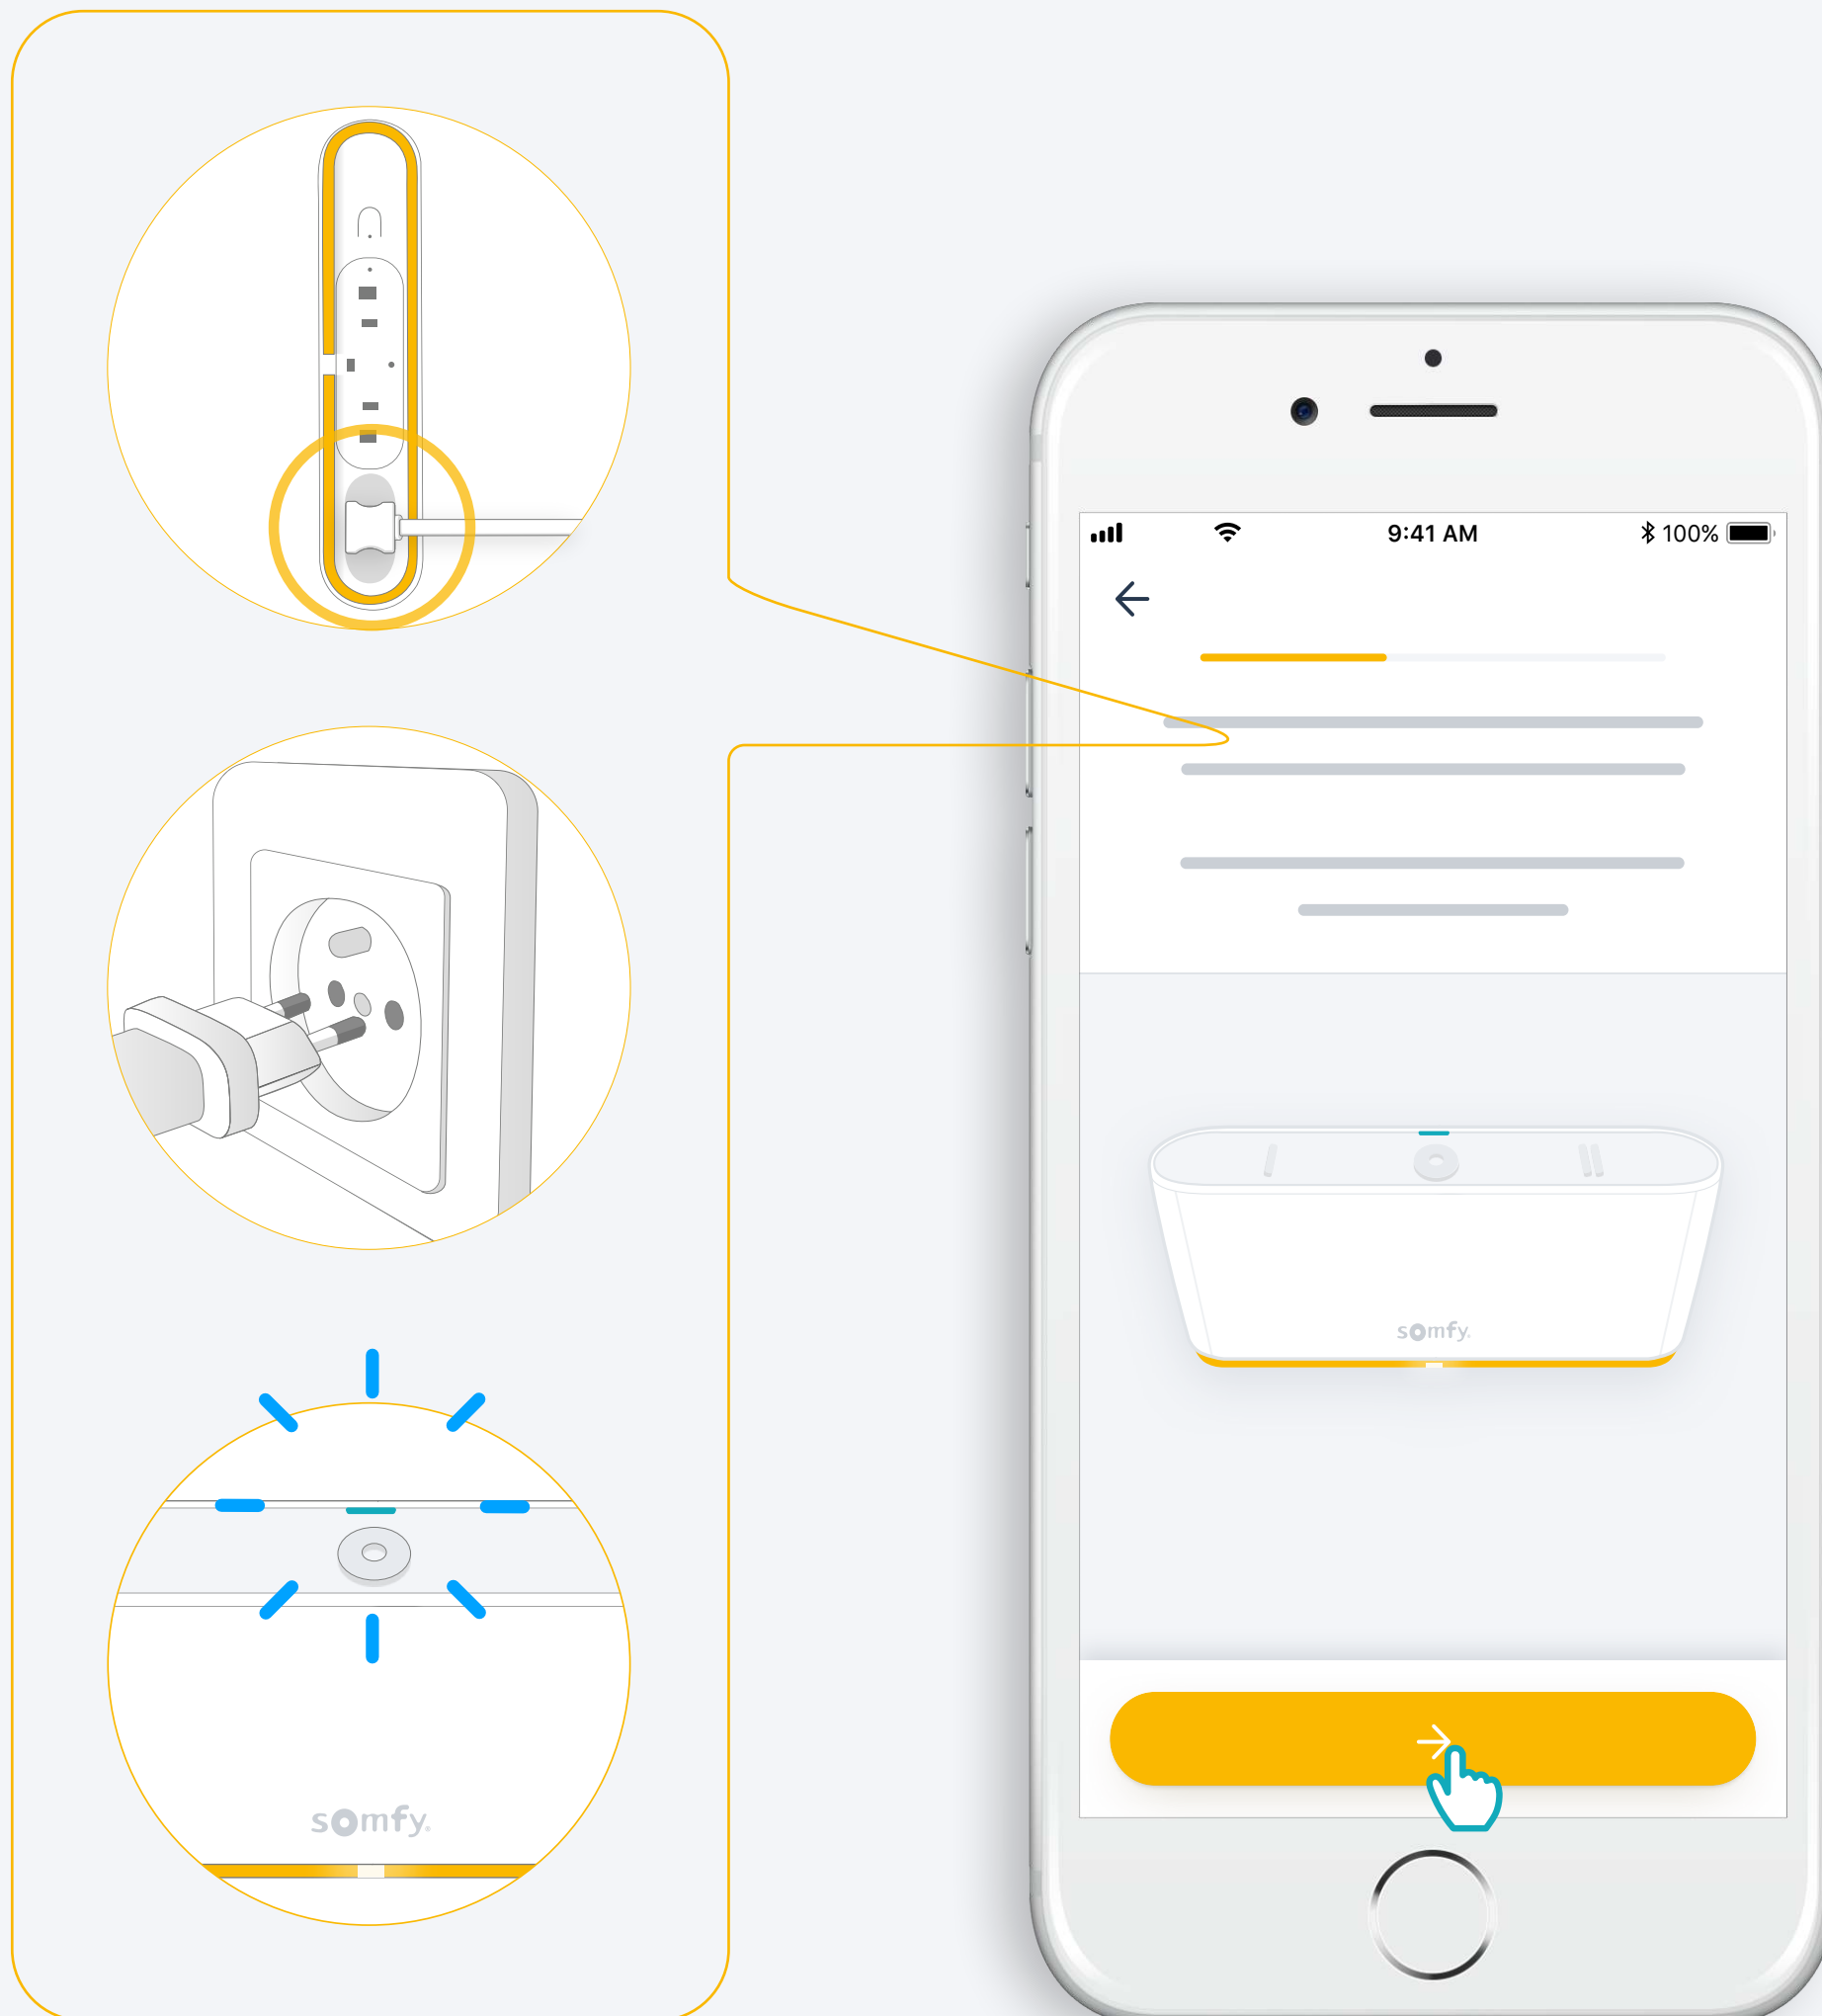


Connect to the internet


Your WiFi network must be in 2.4 GHz and secured with a password.

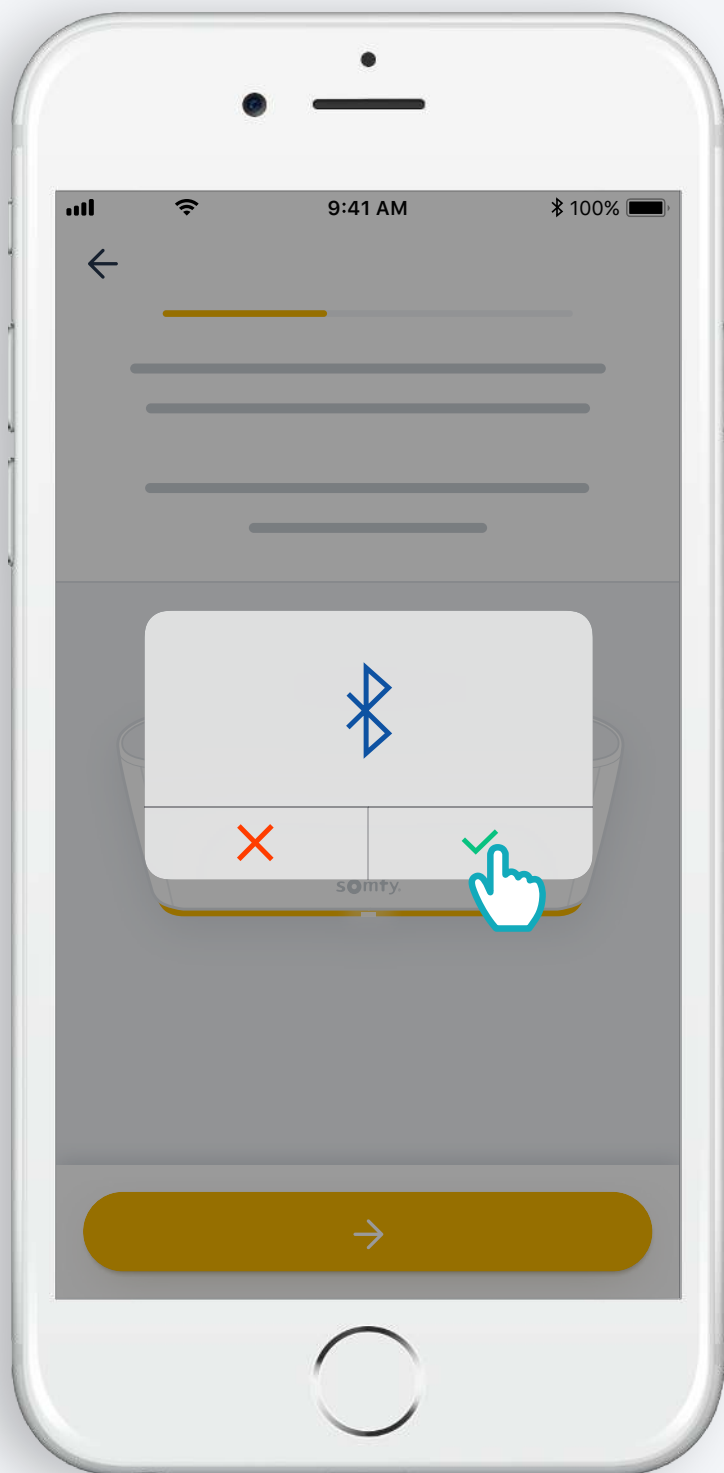

Accept Bluetooth

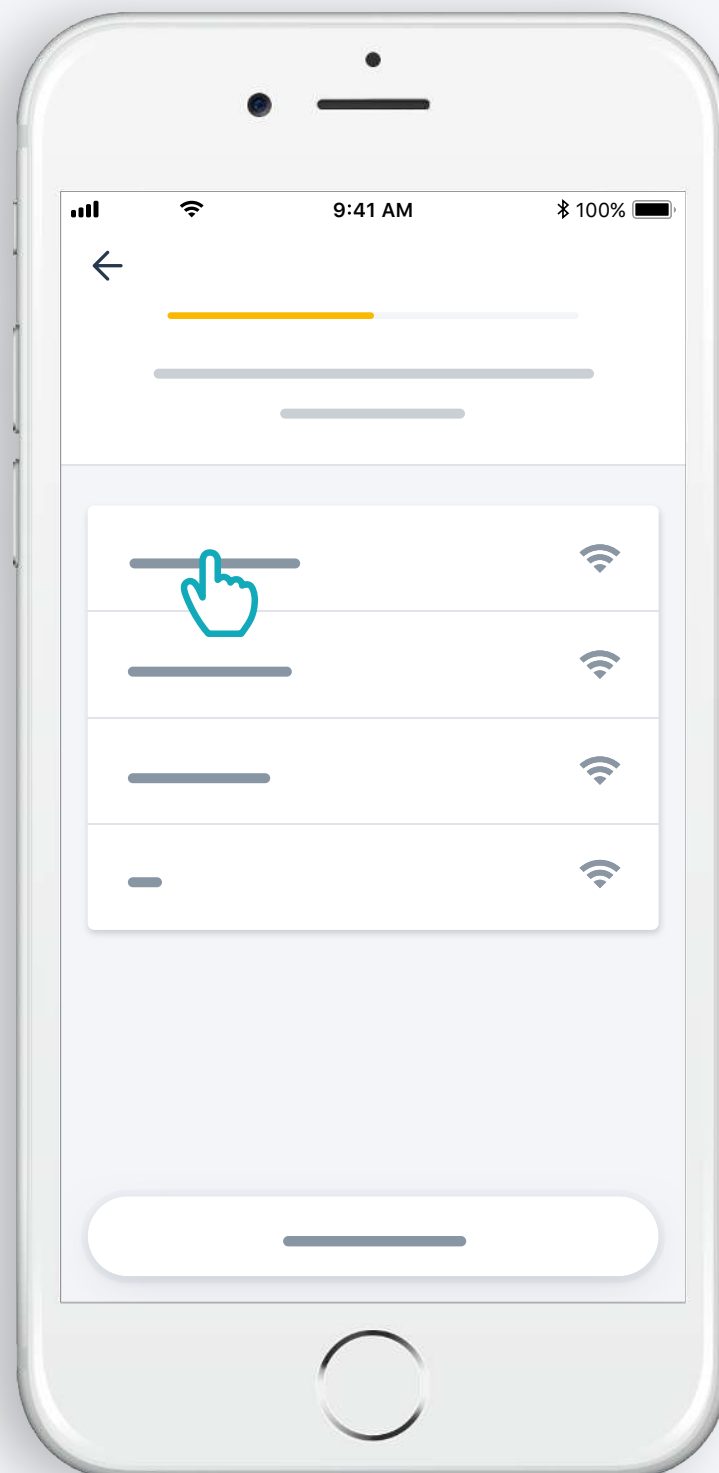


Select WiFi and enter password

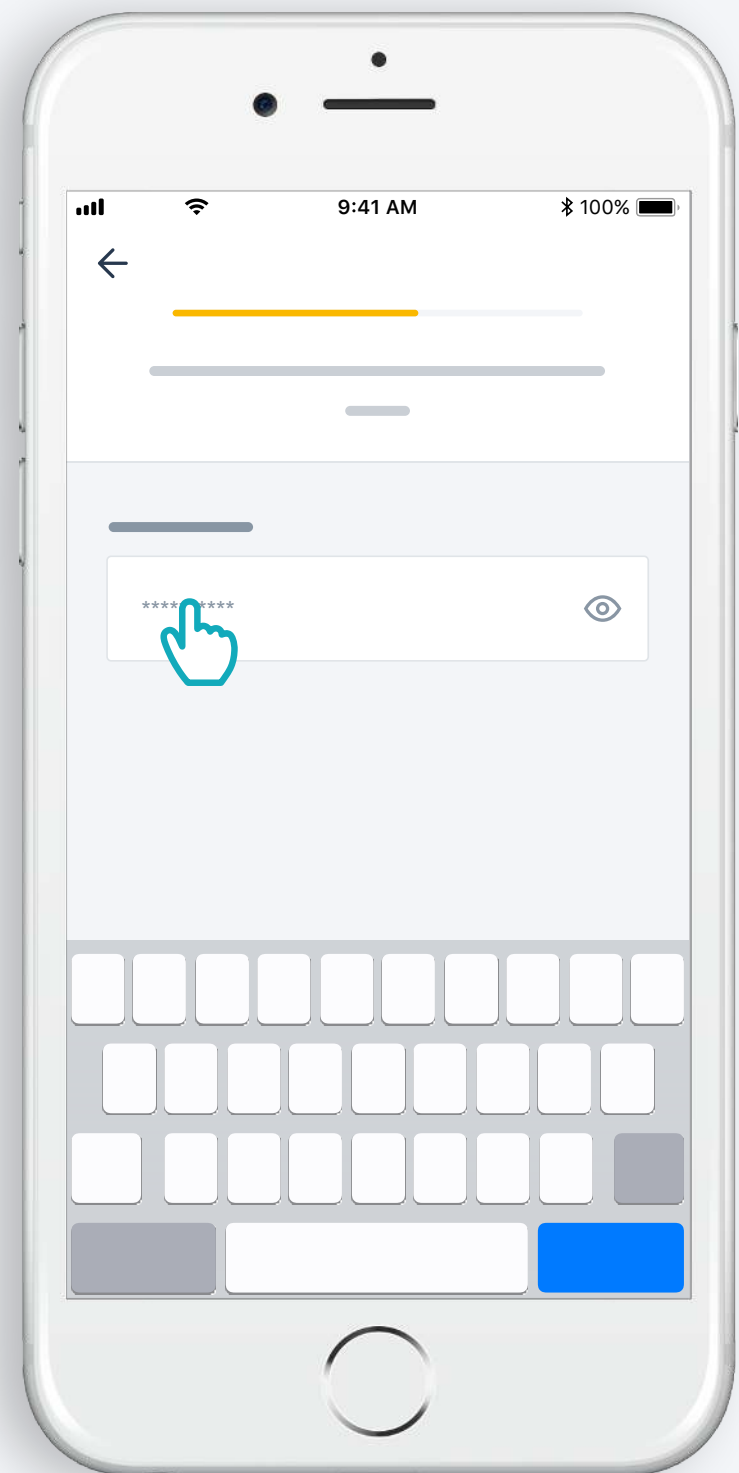


2. Create your TaHoma[®] account
or Log in

Create your TaHoma[®] account or Log in

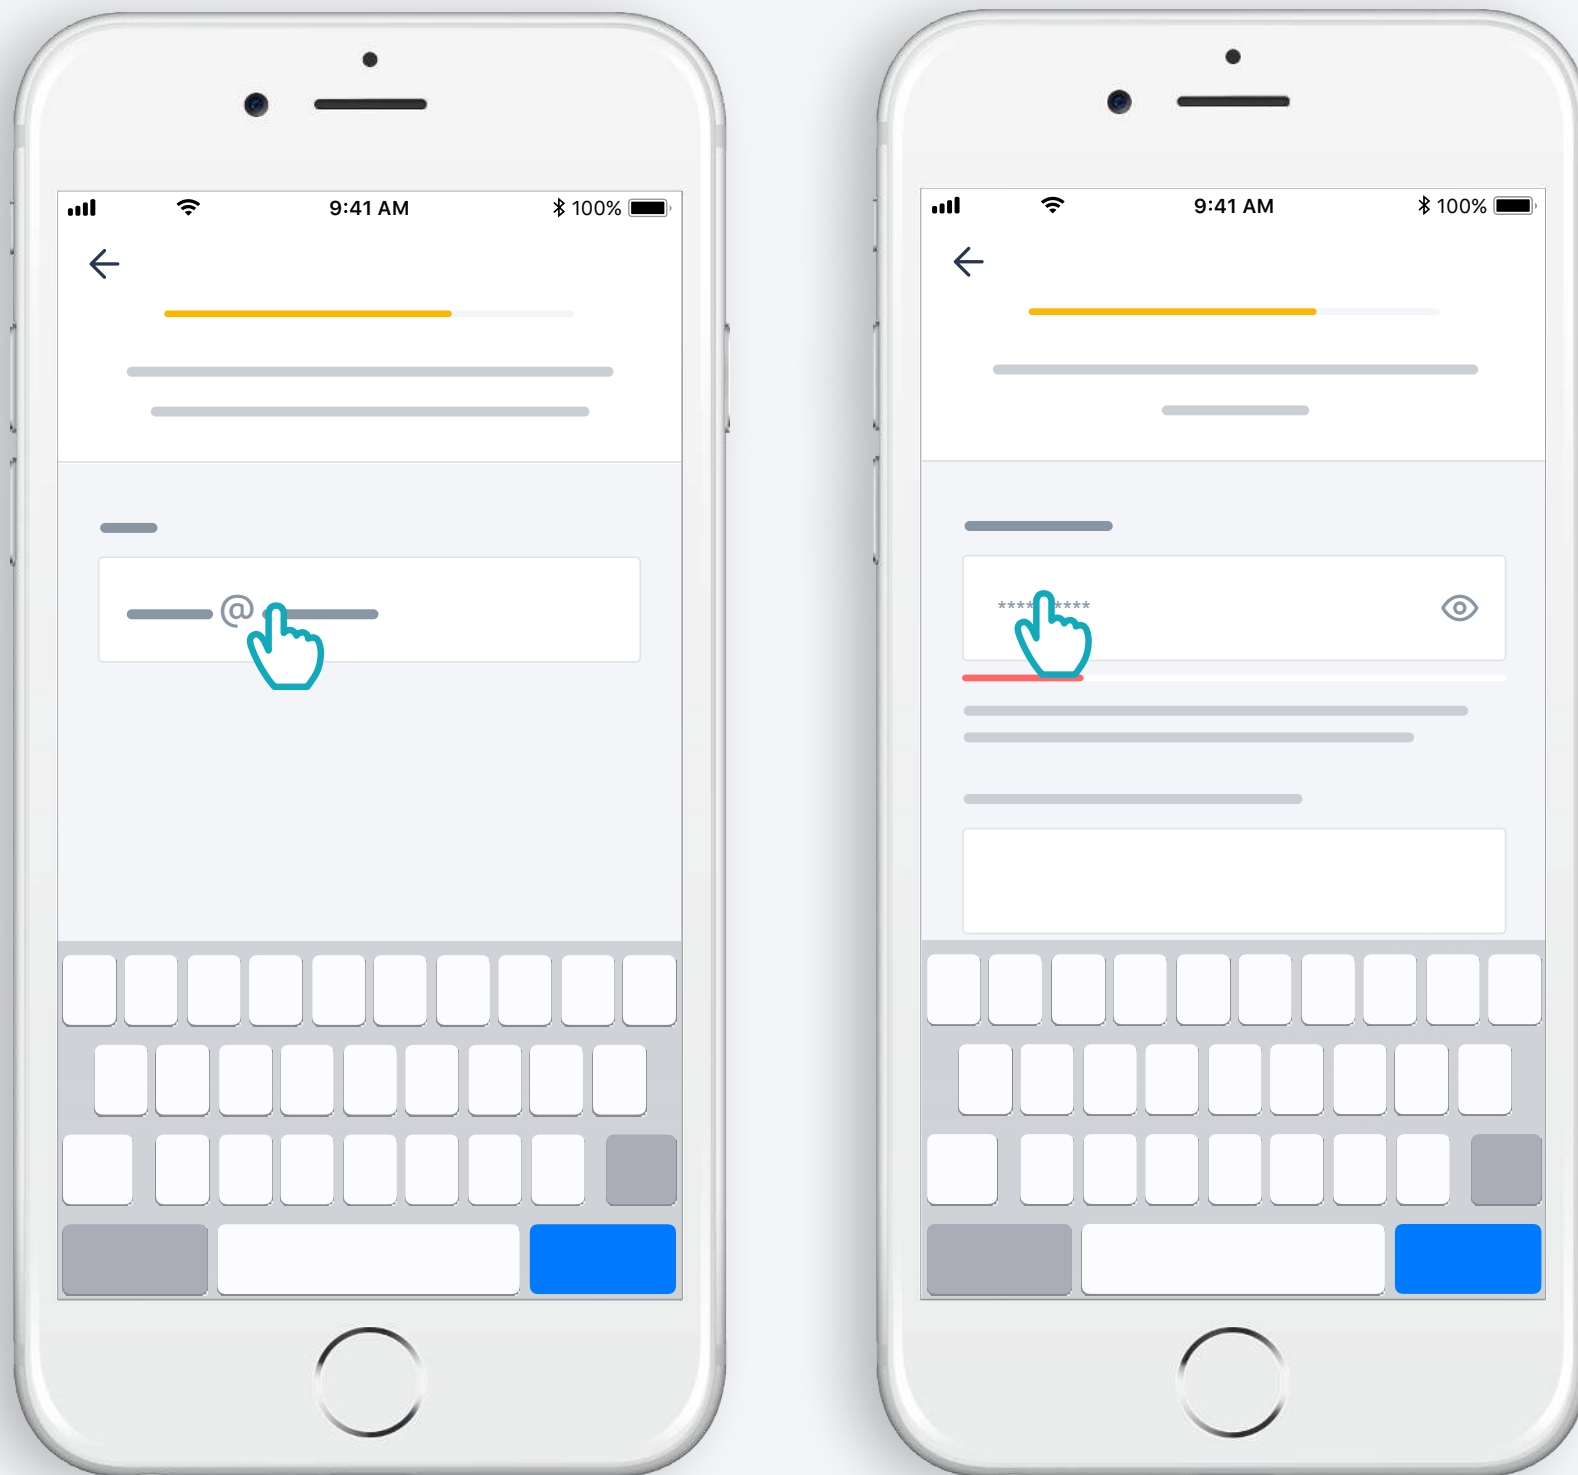


Enter your email address and password


Follow the instructions

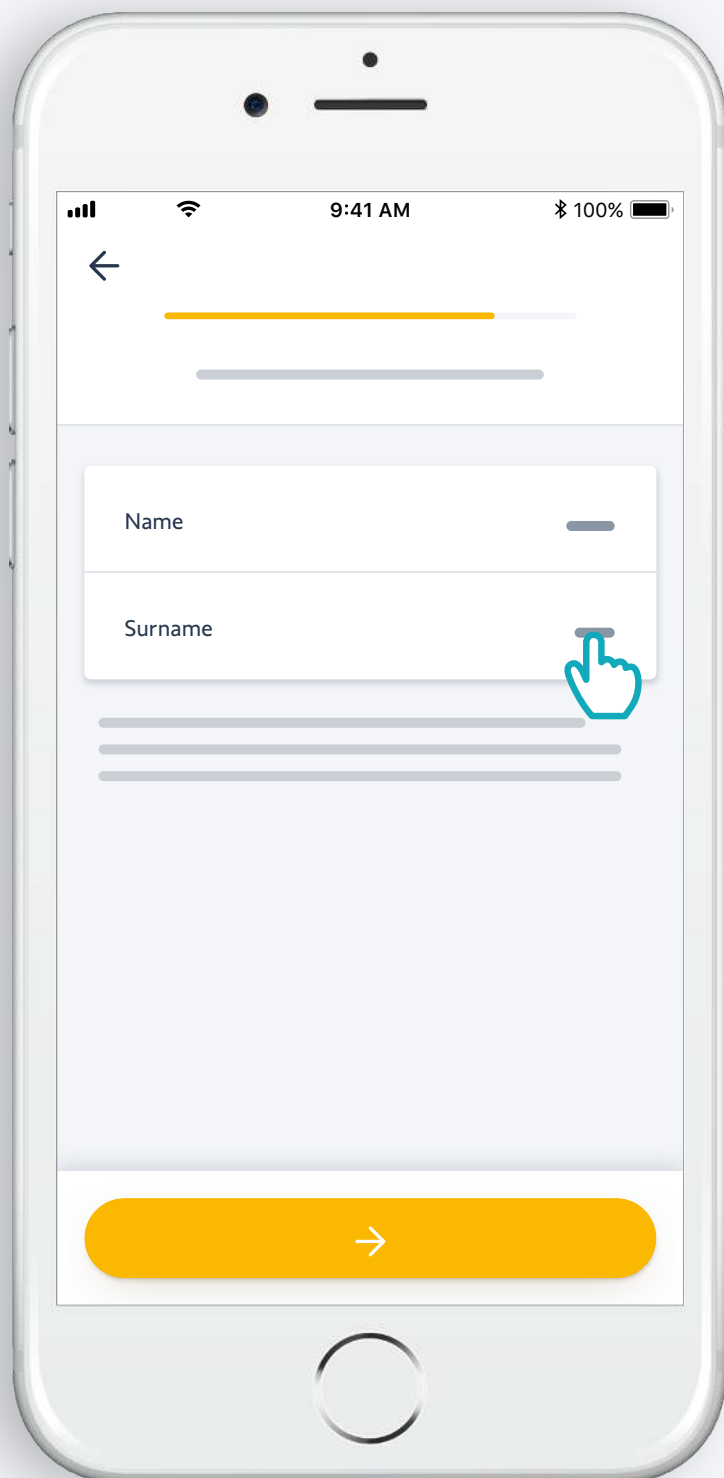

Enter your name

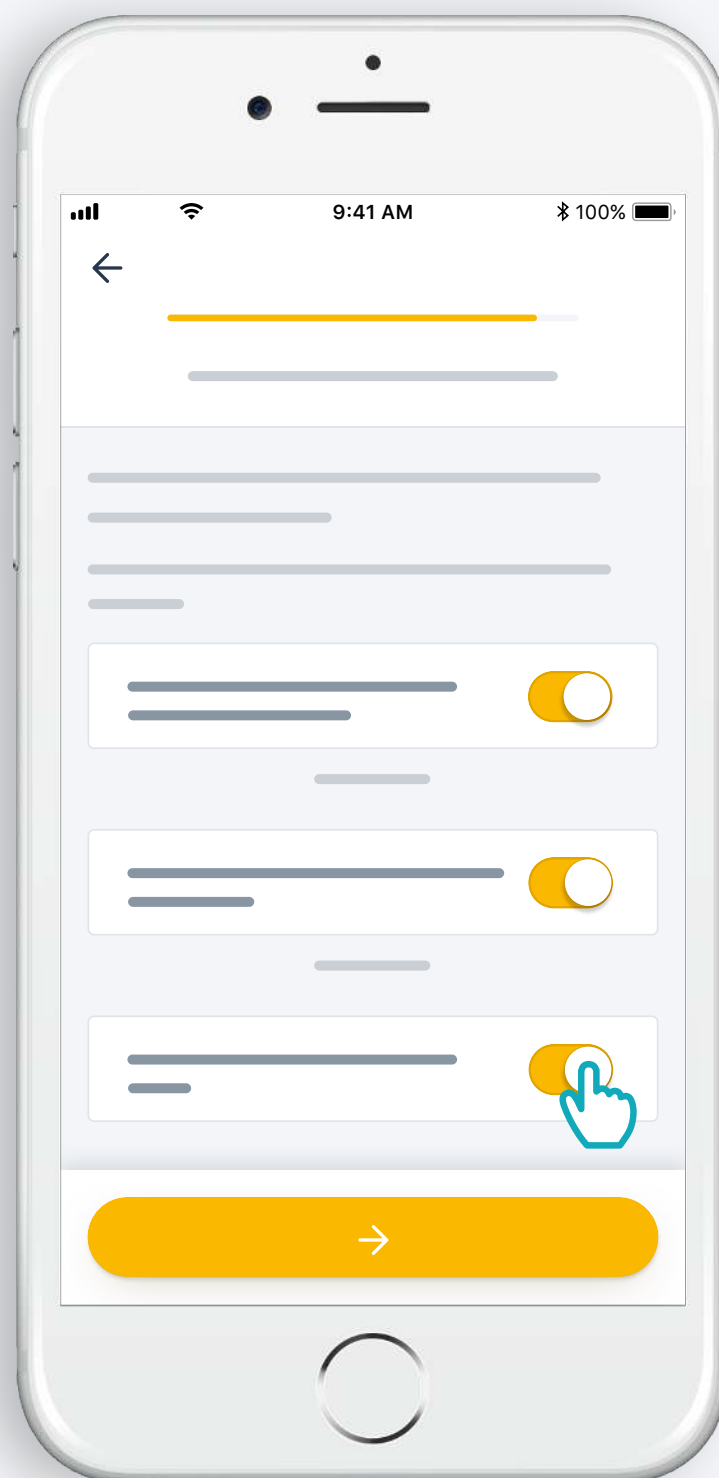


Accept Terms and
Conditions

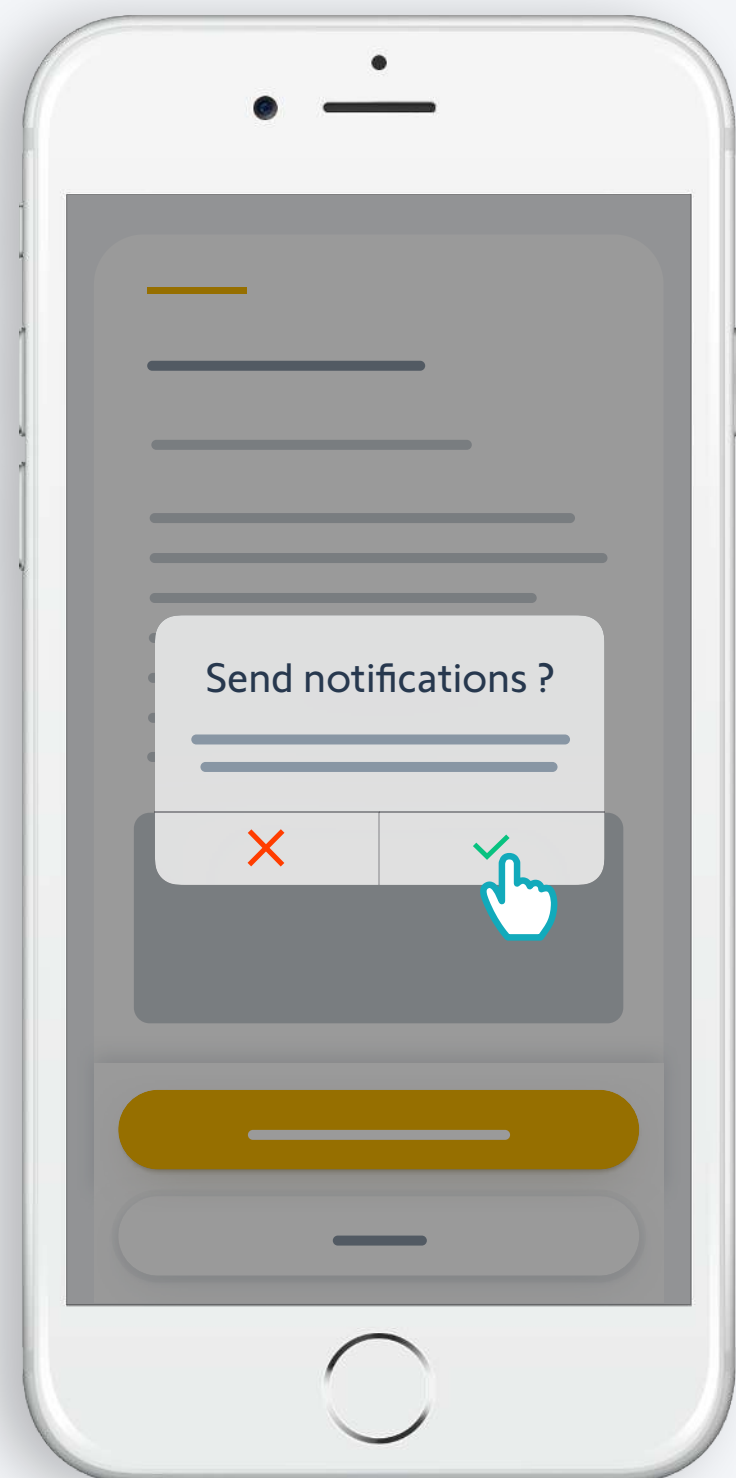

Authorize
notifications for
better experience

Congratulations,
TaHoma[®] switch is ready to use!

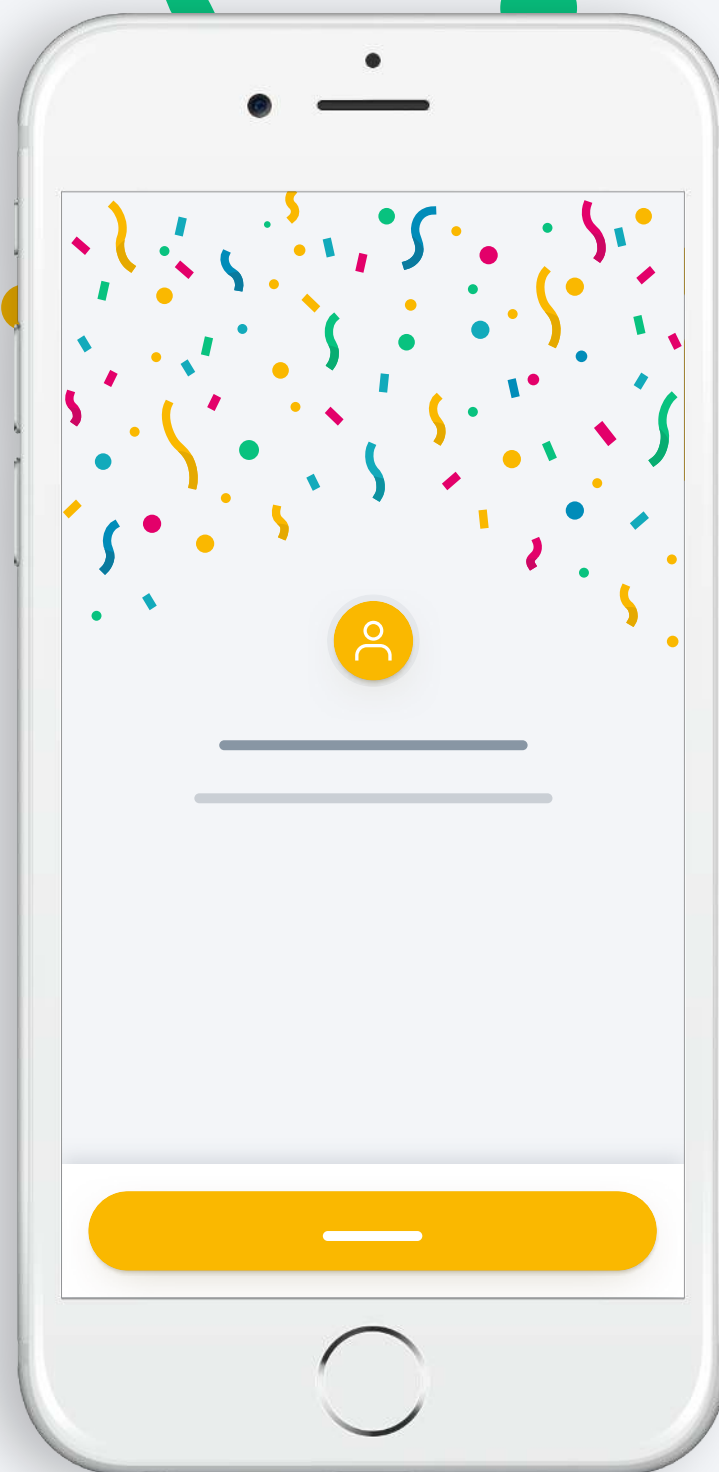

Now :

- Add products,
- Configure the buttons of TaHoma[®] switch,
- And discover all the possibilities offered by the app!

somfy®

5156700A