



DRAPERY ORDER FORM & RESOURCES

Date of Order: _____ Account # _____
 P/O #: _____ Sidemark: _____ Special Shipping Directions: _____

SHIPPING

Sold To:
 Business Name: _____
 Address: _____
 City: _____ State: ___ Zip: _____
 Phone: _____ Fax #: _____
 Email: _____
 Ordered By: _____
 Signature: _____

Ship To:
 Business Name: _____
 Address: _____
 City: _____ State: ___ Zip: _____
 Contact Name: _____
 Phone: _____ Fax #: _____
 Email: _____

ORDER DETAIL: Please see next page for glossary and definition of terms.

Item #	Room	QTY.	1	2	3	4	5	6	7	8	9	10		11	12
			Motor Part No.	Width (in.)	Tandem	Motor Side	*Track Type	Track Color	Stack (L/R/S)	**If Bent: # of bends	Carrier Type	Bracket Part #	QTY.	Butt Master	Splice
ex.	Living Room	1	1246116	144	Y/N	L	F	WHT/BRZ	S	2	RF80	1780907	7	NO	X
1															
2															
3															
4															
5															
6															

* For curved tracks, Somfy requires a template be provided. Please see Directions for Creating a Template for Drapery Curves for template information.
 ** For bent tracks, Somfy does not require a template. Please include the Bent Drapery Tracks Measurement Form for exact measurements per angle and return.
 NOTE: Somfy includes a center splice every 16' of track. Please indicate in the "SPECIAL INSTRUCTIONS" section if your requirements differ from Somfy's standard.

CONTROLS: In the space provided below, please list the part number(s) for the control(s) you desire.

Given the nature of custom motorization products, control options and compatibility varies dramatically. If you would like further assistance with control options, simply note it in the field below and one of our customer service specialists will contact you upon the submission of your order.

SPECIAL INSTRUCTIONS

1	Motor	Part Number
	Glydea® ULTRA 35 Motor RTS with 10' Plug	1246116
	Glydea® ULTRA 35 Motor DCT with 10' Plug	1246115
	Glydea® ULTRA 60 Motor RTS with 10' Plug	1246118
	Glydea® ULTRA 60 Motor DCT with 10' Plug	1246117
	Glydea® ULTRA 35 Wired Motor with 10' Plug	1003153
	Glydea® ULTRA 60 Wired Motor with 10' Plug	1003160
	Irismo™ 35 (Mini DC) RTS	1003004
	Irismo™ 35 (Mini DC) DCT	1003003
	Irismo™ 45 WireFree RTS	1002353

2 Width (Inches)
 Motorized drapery tracks are custom built according to the specified width. Please note that the finished track width is measured pulley end to pulley end. For bent and curved tracks please provide the total of all wall measurements. When fabricating your drapery please add 1.5" to your return.


3 Tandem Y=Yes N=No
 Tandem motorized systems utilize two drapery motors. Items needed for tandem systems should be noted in the Special Instructions Section of the order form.
Tandem alternative = 2 one way tracks
Requires Glydea ULTRA DCT or IRISMO 35 DCT motors.

4 Motor Side
L=Left Side R=Right Side
 Choose the motor side best suited for your installation.

5 Track Type
A-I See below O=Other
 NOTE: Somfy requires a template for all curved tracks. Add an "S" after Track Type for Silent Master Carrier option (ie., "A-S"). Please see **Directions for Creating a Template for Drapery Curves** for necessary information.

A	One way	D	One way w/Bend	G	Center Opening w/2 Bends

6 Track Color - White or Bronze

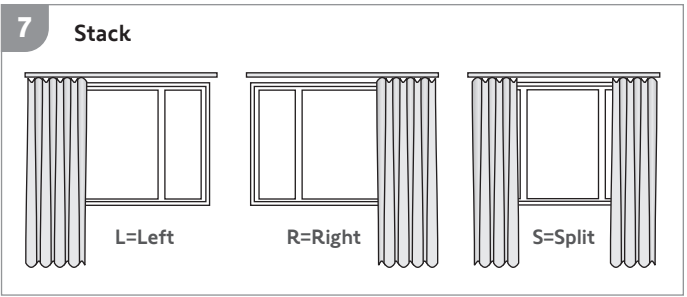

8 If Bent: # of Bends
1=1 Bend, 2=2 Bends, 3=3 Bends, etc.
 NOTE: Somfy requires exact angle measurements for all bent tracks. Please submit completed and signed **Bent Drapery Track Measurement Form** with all bent track orders.

9 Carrier/Runner Type
1=1 Bend, 2=2 Bends, 3=3 Bends, etc.

SPP=Silent Pinch Pleat
 (QTY of 3 per foot included)

PP=Pinch Pleat
 (QTY of 3 per foot included)

RF80 = RippleFold® 80% fullness
 (QTY of 5 per foot spaced every 2 3/8" included)

RF100 = RippleFold® 100% fullness
 (QTY of 6 per foot spaced every 2 1/8" included)

RF120 = RippleFold® 120% fullness
 (QTY of 7 per foot spaced every 1 7/8" included)

10 Brackets
 NOTE: Brackets are not included and must be ordered separately.

Part Numbers	White	Bronze
One Touch Ceiling Bracket (not recommended for curved tracks)	# 1780907	# 1782865
4.5"-6" Wall Mount Bracket	# 1782054	# 9025621
8.75"-10.25" Double Wall Mount Bracket	# 1782053	# 9025622
Swivel Ceiling Bracket (strongly recommended for curved tracks)	# 1780906	# 1782864

Somfy recommends one (1) bracket by each pulley and one (1) bracket every 24". Additionally, one (1) bracket should be placed on each side of a splice if used.

11 Butt Master
Y=Yes N=No
 Only available for RippleFold® center opening systems. Quantity 2 required; please note item numbers in **Special Instructions Section** of the order form item #1780953.

12 Splice
X=Special splice instructions
 Somfy includes a center splice every 16ft of track. Please indicate in the Special Instructions Section if your requirements differ from Somfy's standard.




BENT DRAPERY TRACK MEASUREMENT FORM


- Choose the design that best fits your room setup.
- Measure the wall and degrees of all angles as in examples shown below.
 - Make sure to provide the return measurement "R" (distance from wall to front of drapery track as shown in red). The bent track measurement form represents wall measurements, therefore the "R" dimension MUST BE specified for accurate track fabrication. If "R" dimension IS NOT specified, drapery track will be fabricated according to dimensions (A, B, C, D, etc.) provided.
 - Return dimensions will not be considered, and measurements will be calculated from center of each bend.
 - When fabricating drapery, please add an additional 1.5 inches of drapery fabric to the anticipated return size.
- Provide all measurements by filling out order form and submitting to Somfy.

NOTE: The following dimensions are shown from top view of the track and show various wall designs.


STYLE 1 MEASUREMENT

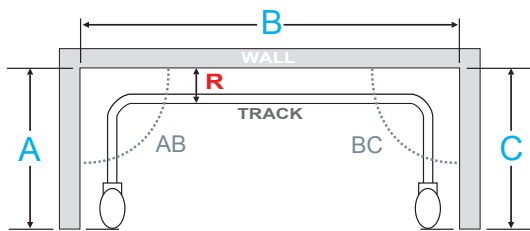


STYLE 2 MEASUREMENT

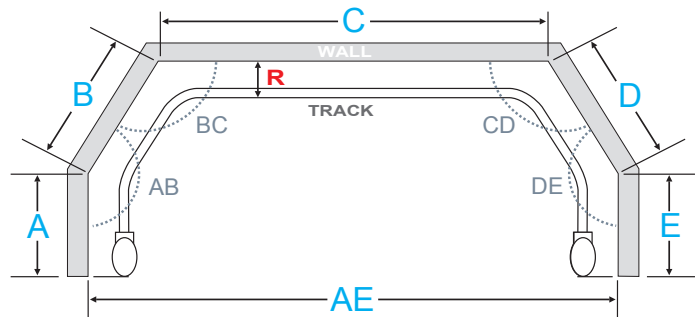


STYLE 3 MEASUREMENT

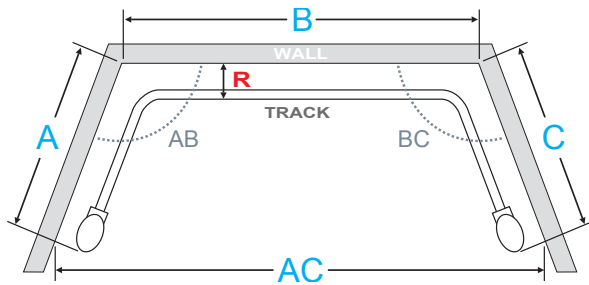

STYLE 4 MEASUREMENT

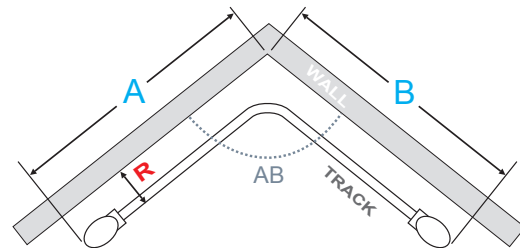

STYLE 5 MEASUREMENT*

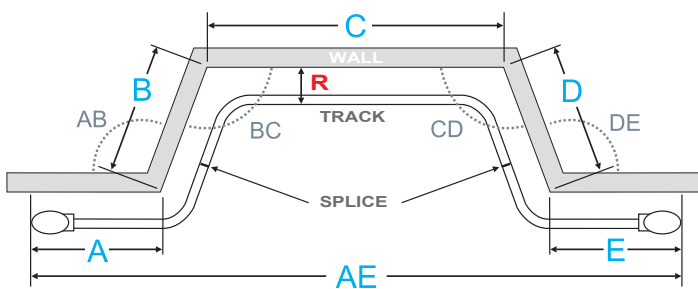

TRACK 1

"R" Dimension _____
 Style ____ Degree of
 Bend
 A _____
 B _____ AB _____
 C _____ BC _____
 D _____ CD _____
 E _____ DE _____
 AC _____
 AE _____

TRACK 2

"R" Dimension _____
 Style ____ Degree of
 Bend
 A _____
 B _____ AB _____
 C _____ BC _____
 D _____ CD _____
 E _____ DE _____
 AC _____
 AE _____

* Splices are required for this style.

NOTE: Irismo™ 45 WireFree RTS is not compatible with bends and curves.



DIRECTIONS FOR CREATING A TEMPLATE FOR DRAPERY CURVES

What you need: • Large piece of construction paper • Tape Measure • Marker • Tape

- 1 Start with a large piece of construction paper that exceeds the depth and length of the curve.
 - 2 Place the paper on the floor or ceiling depending on the orientation of the curve.
 - 3 Secure the paper with tape.
 - 4 Clearly define the stacking side, motor placement, pocket depth and center line of track with the marker.
 - 5 Mark the radius of the curve.
- Please call Somfy for specialty curving applications. Depending on your particular application, your project may require special attention.**
- 6 Please provide as much detail as possible and all templates must include the following:
 - Indicate "room side"
 - Note how the template was created
 - Purchase order number
 - Template created on the floor facing up (See Figure 1) *preferred method*
 - Template created on the ceiling facing down (See Figure 2)
 - Customer name
 - Company name and account number
 - 7 Note the distance from the wall or the window to the center of the track. **NOTE: be sure to clear all possible obstructions such as handles, sills etc.**
 - 8 Identify the following measurement points:
 - Placement of motor
 - Exact stopping point of track on template
 - Total measurement of curve (See Figure 4-"C")

FIGURE 1: TEMPLATE ON THE FLOOR FACING UP

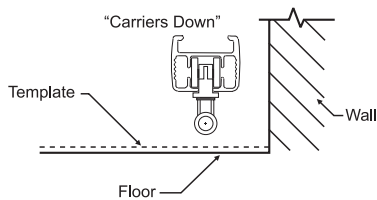


FIGURE 2: TEMPLATE ON CEILING FACING DOWN

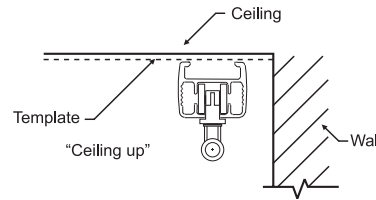


FIGURE 3: CRITICAL DIMENSIONS OF A CURVED TRACK


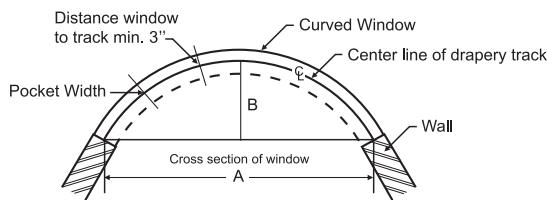


FIGURE 4: TOTAL MEASUREMENT OF CURVE

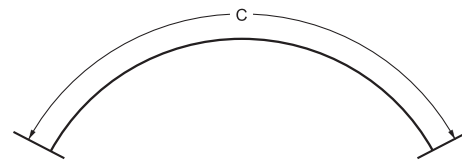

Template Submission Instructions

- Attach a copy of the purchase order to the template.
- Roll up template and place in a mailing tube.

DO NOT FOLD TEMPLATE

NOTE: When mailing, be sure to:

- Get a tracking number
- Include your return address
- Include your purchase order number on the label

Mail to:

Somfy Systems, Inc.
121 Herrod Blvd.
Dayton, NJ 08810
Attn: Drapery Department

Acceptable materials for making templates:

- Kraft Paper • Butcher Paper • Construction Paper

Somfy will not accept template made from the following materials:

- Newspaper • Plastic • Wax Paper • Fabric • Tissue Paper
- Roofing Paper • Existing Arch Shades • Wrapping Paper

NOTE: If the material used to make a template stretches, tears easily, will not lay flat or will mark the fabric - IT WILL NOT BE USED.

NOTE: Irismo™ 45 WireFree RTS is not compatible with bends and curves.